




**The Williams Bros.  
Corporation of  
America**

FAMILY OWNED & OPERATED  
Since 1990

## WB-TB 1210 Drop-In Ceiling Door Installation Instructions


SECTION DETAIL:

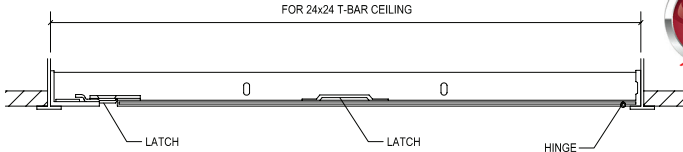

BEFORE



AFTER

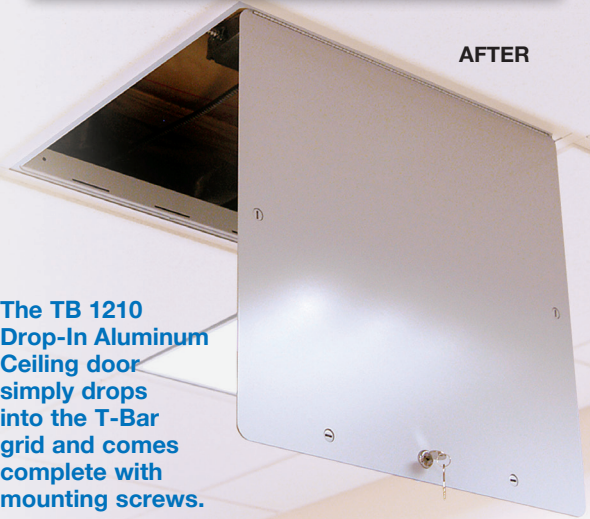

The TB 1210 Drop-In Aluminum Ceiling door simply drops into the T-Bar grid and comes complete with mounting screws.



### TO INSTALL:

- Insert door into ceiling cavity around t-bar grid.
- Make sure that the door is level and square within the t-bar frame.
- Note mounting holes on return frame. Using mounting screws supplied (#10 x 3/4 TCS), screw return frame to the t-bar grid.
- Must use mounting screws to ensure safe and secure installation.
- To complete installation bring door to a closed position and secure cams to return frame.

**1-800-255-5515 Buy direct at  
[www.wbdoors.com](http://www.wbdoors.com)**



Corporate Office: 1330 Progress Drive • Front Royal, Virginia 22630