




WB-FR 850 Fire Rated Upward Swinging Access Door

CEILING INSTALLATION

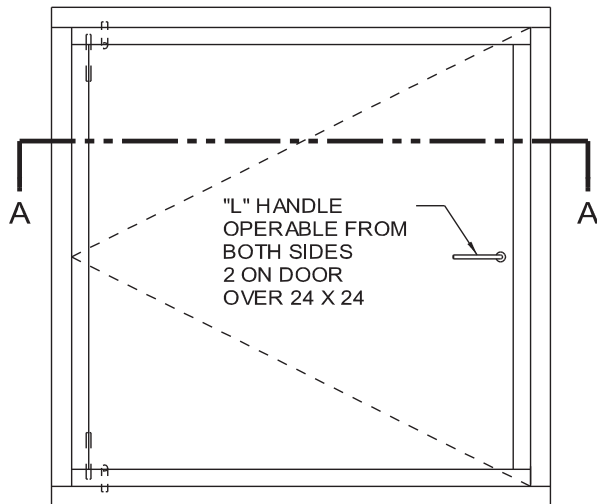

FRONT ELEVATION
NOT TO SCALE

1. Construct ceiling in accordance with local building code
2. OPENING SIZE PER CONDITION:
 - A) for 1 hour combustible ceilings cut opening nominal + 1/2"
 - B) for 3 hour non-combustible drywall ceilings cut opening nominal + 1-3/4". The interior of the opening must be wrapped with 5/8" thick drywall effective opening available nominal + 1/2"
 - C) for 3 hour non-combustible masonry block or cast concrete slab, cut opening nominal + 1/2"
3. Place the panel in position in ceiling opening unlock door and bring it to fully open position
4. Check level to ensure square and flush mounting, mark location of mounting screws and remove panel
5. Drill 5/32" holes through drywall into studing
6. Place the panel in position in ceiling and attach with:
 - A) #10 x 2-1/2" drywall screws
 - B) 310 x 2-1/2" masonry screws

FOR FIRE RATED CEILINGS: This door has been approved by Warnock Hersey Internationals for 3 hours in non-combustible ceilings and 1 hour in combustible ceilings

