




WB-FR 800 SERIES 2 hr Fire Rated Access Door

WALL INSTALLATION

2 HOUR WALL INSTALLATION (DOORS 8" X 8" UP TO & INCLUDING 48" X 48")

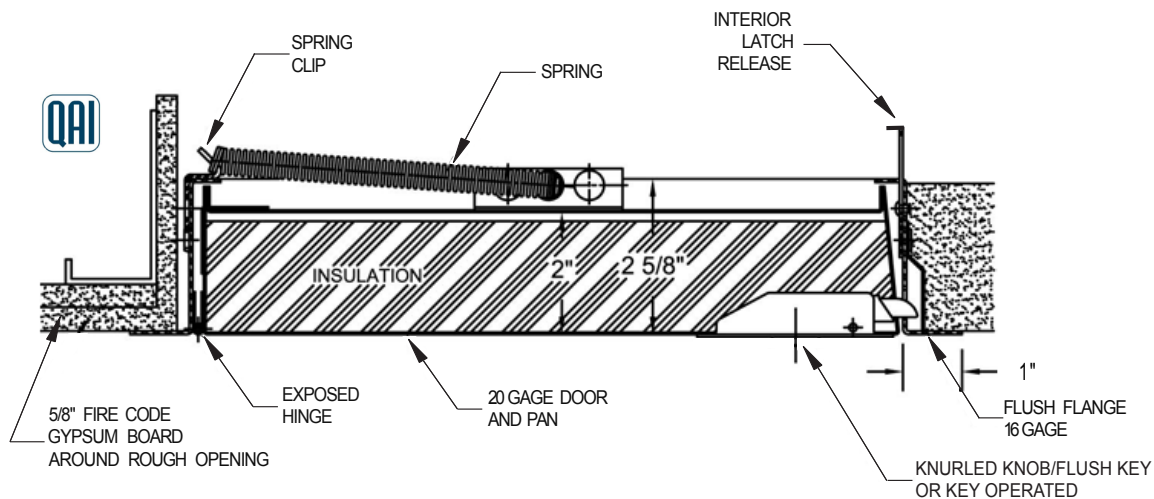

1. WALL OPENING: Opening dimensions should be 3/8 larger than catalog size of door.
2. OPENING INTERIOR: Frame all four sides of opening with 2 sheets of Type X Fire Rated Drywall and line interior of joists with drywall against the return frame.
3. Doors larger than 16 x 16 should have double studs on both sides in same manner as passage doors.
4. LOCATION/PLACEMENT: Position the door in an opening and mark location on joists using holes return frame as reference.
5. Drill holes at marked points with a 5/32 drill bit.
6. POSITIONING: Place Door in position and attach with #10 x 1 3/4 flat head sheet metal screws (or larger when needed)
7. FINAL INSTALLATION: Check door Panel for freedom of movement. If it binds, remove any racking of return frame at attachment of joists. Fill any gaps between return frame and gypsum-lined joints that are greater than 1/4 wide with mineral wool or gypsum joint compound.
8. PRE-INSTALLATION: Before installing the door, bend lock release bracket inward causing it to stay in up position.
9. SELF-CLOSING: Test to insure self-closing, door must be released from at least 60 degrees from horizontal.



1-800-255-5515 wbdoors.com