

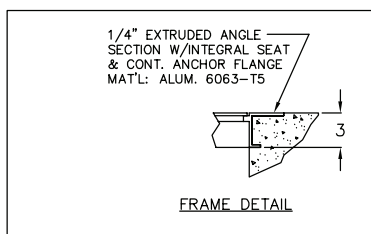


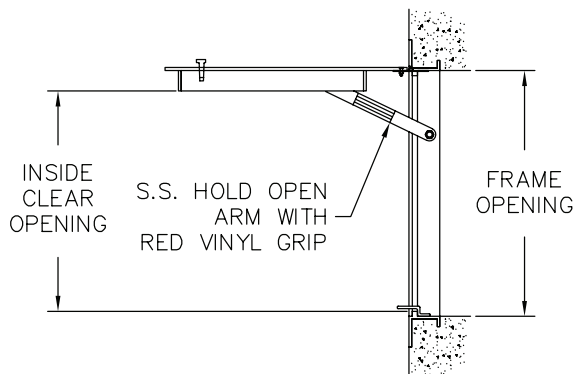

WB APS 8100 SERIES 300 PSF Aluminum Floor Access Doors

STORAGE, HANDLING, INSTALLATION & MAINTENANCE INSTRUCTIONS

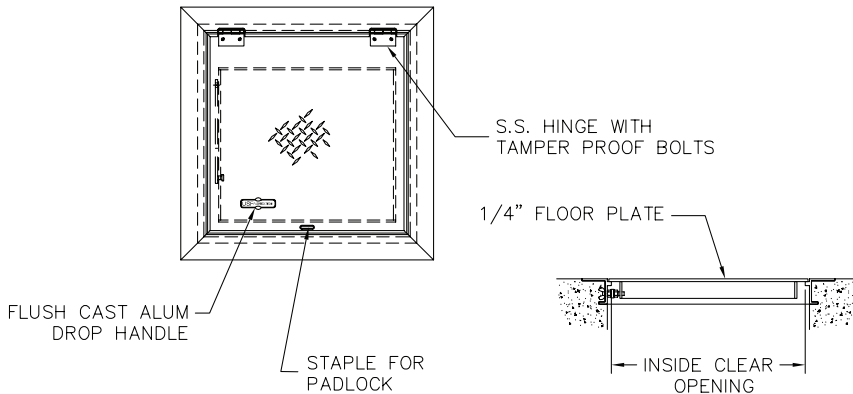

STORAGE

Prior to installation, floor access doors must be stored in a dry, clean area free of dust and debris. For optimal protection, always keep the doors on their original shipping pallets.

HANDLING

Use standard safety procedures when moving floor access doors.

Caution: When handling palletized doors, always use a forklift with proper support to avoid damage.

INSTALLATION

- 1. Align Formwork:** Ensure the formwork is flush against the inside of the floor door frame.
- 2. Secure in Place:** Anchor the frame to the formwork using approved construction methods.
- 3. Cover Closed During Pour:** Keep the cover closed while pouring concrete to prevent contamination.
- 4. Level Finish:** Concrete must be finished flush with the top edge of the unit frame.
- 5. Curing Time:** Leave the door in the formwork for a minimum of 24 hours before removal.
- 6. Post-Pour Cleanup:** Remove all excess concrete from the frame and cover seat. For trough-style frames, also clean the drainage coupling to ensure proper water flow.