


## WB TPS 8300 SERIES Tamper-Resistant Aluminum Floor Hatch

### STORAGE, HANDLING, INSTALLATION & MAINTENANCE INSTRUCTIONS

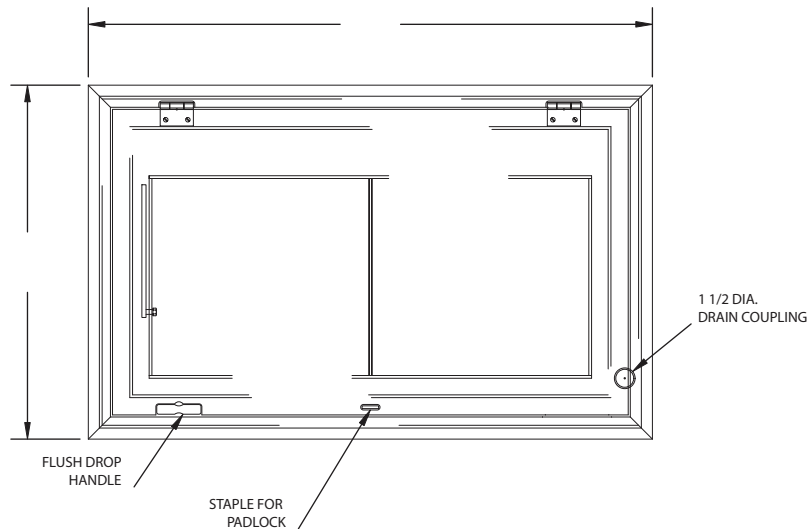

#### STORAGE

Prior to installation, floor access doors must be stored in a dry, clean area free of dust and debris. For optimal protection, always keep the doors on their original shipping pallets.

#### HANDLING

Use standard safety procedures when moving floor access doors.

Caution: When handling palletized doors, always use a forklift with proper support to avoid damage.

#### INSTALLATION

1. **Align Formwork:** Ensure the formwork is flush against the inside of the floor door frame.
2. **Secure in Place:** Anchor the frame to the formwork using approved construction methods.
3. **Cover Closed During Pour:** Keep the cover closed while pouring concrete to prevent contamination.
4. **Level Finish:** Concrete must be finished flush with the top edge of the unit frame.
5. **Curing Time:** Leave the door in the formwork for a minimum of 24 hours before removal.
6. **Post-Pour Cleanup:** Remove all excess concrete from the frame and cover seat. For trough-style frames, also clean the drainage coupling to ensure proper water flow.

